

# Home Decorators

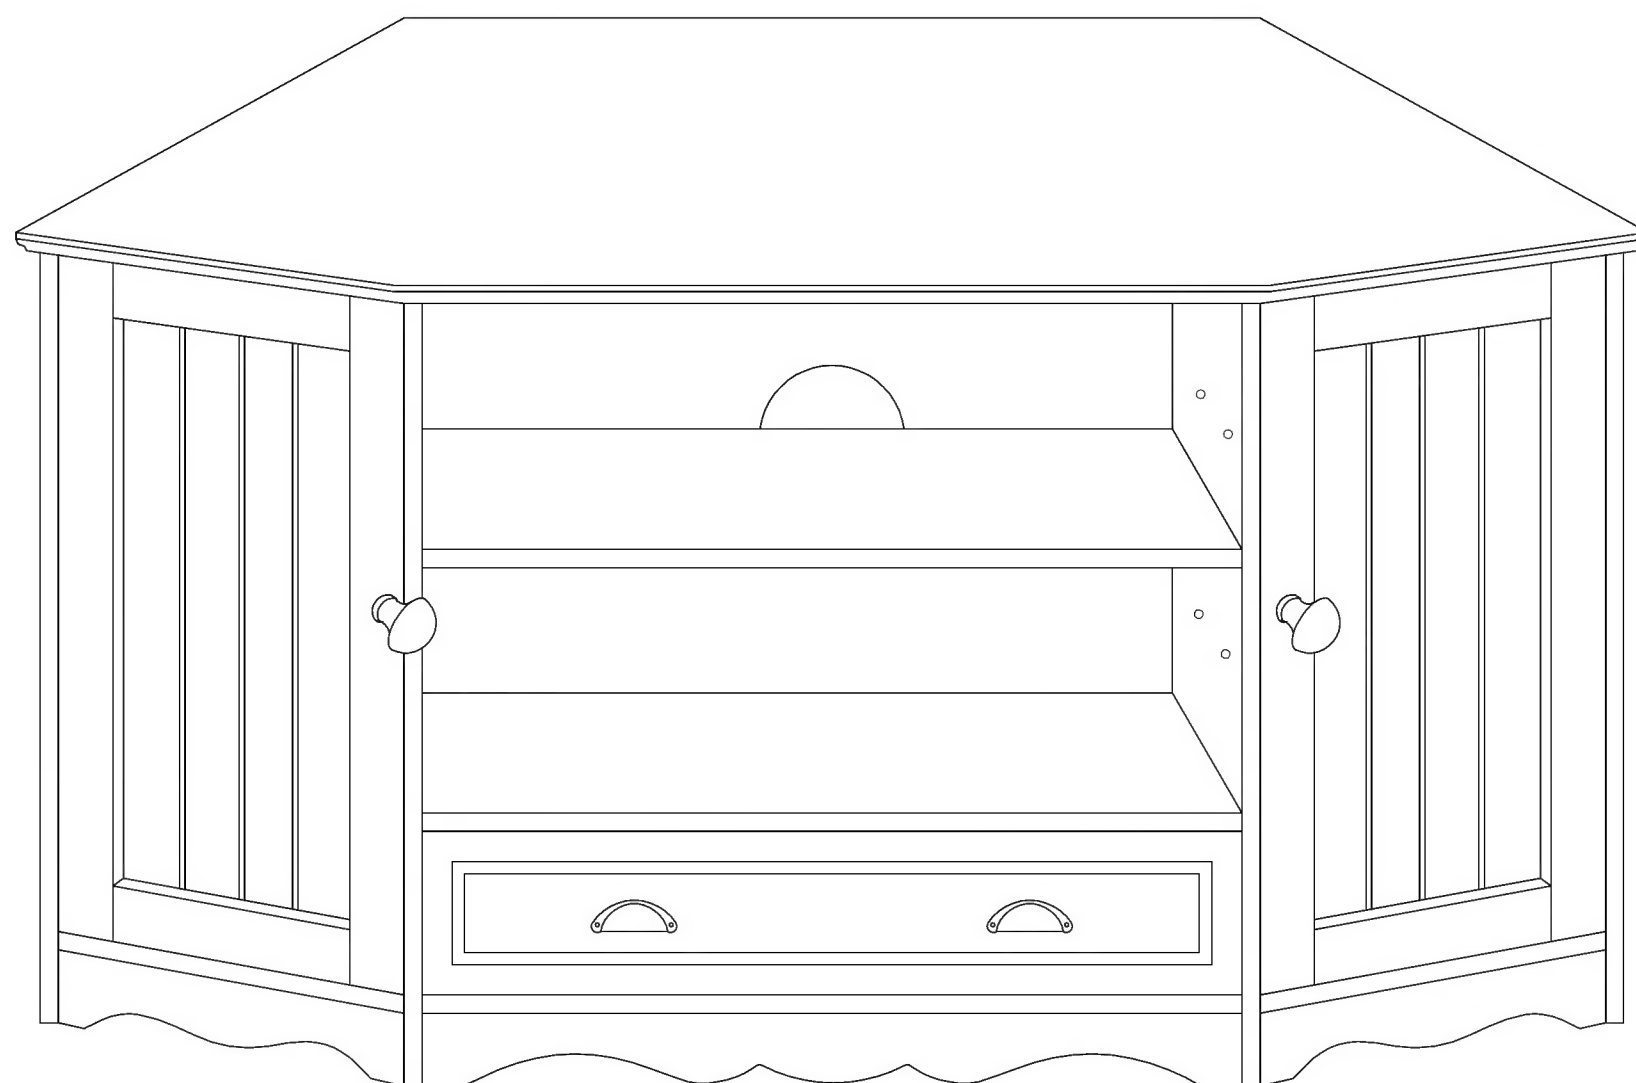
Collection

HDC# 08047 MFG# TW-18407IY  
SOUTHPORT CORNER MEDIA CABINET 26"Hx53"W x20"D

## ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.


Made In China




# ***BEFORE ASSEMBLY***

**IMPORTANT NOTE:** READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

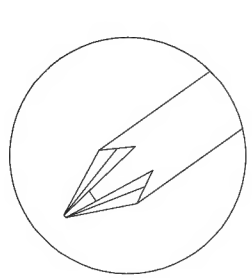
## **ASSEMBLY TOOLS REQUIRED**




"+"Screw driver

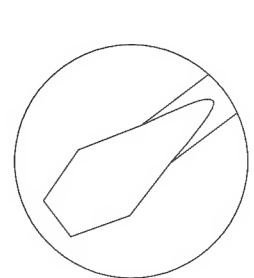

"-"Screw driver

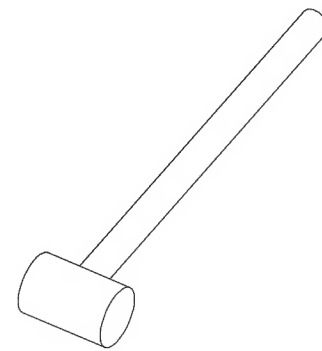


Rubber Mallet

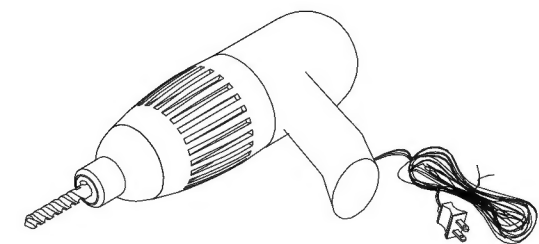

Electric drill

## ***WOODEN DOWEL INSTALLATION PROCEDURE***

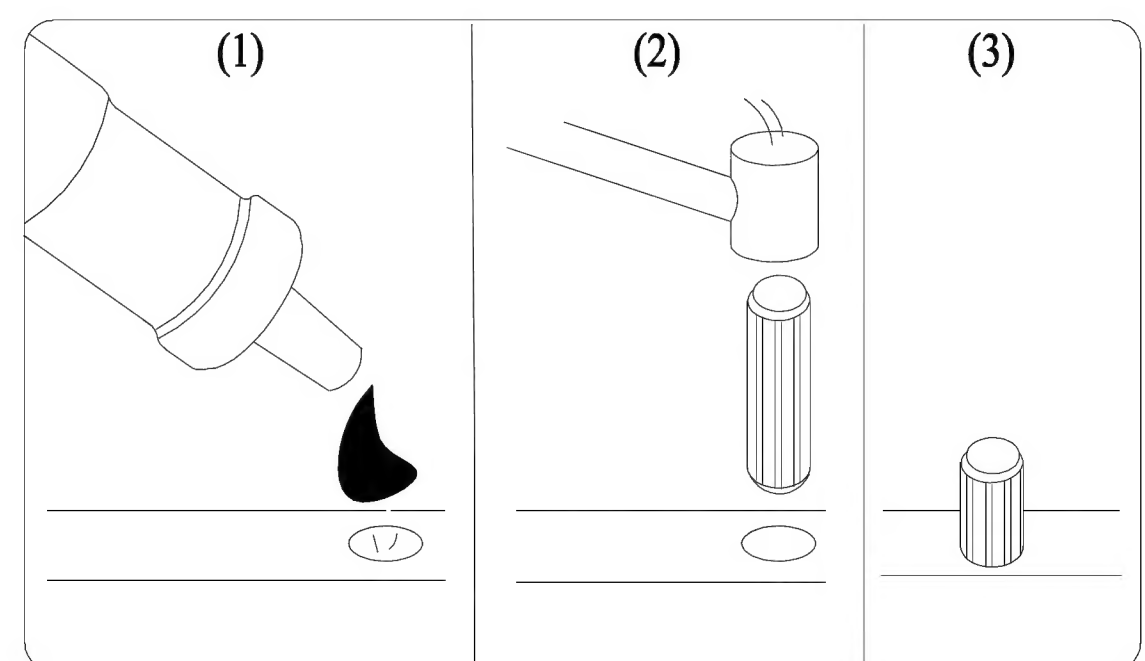- (1) FILL HOLE 1/4 FULL OF GLUE.
- (2) GENTLY TAP DOWEL INTO HOLE WITH RUBBER Mallet OR USE HAND PRESS IN.  
DO NOT USE HAMMER
- (3) WIPE AWAY EXCESS GLUE.



## ***HIDDEN CONNECTOR ASSEMBLY TECHNIQUES FOR LOCK NUT & LOCK PIN***

1 SET INCLUDES: (C) CAM-LOCK 1PC. (A) CAM BOLT 1PC.

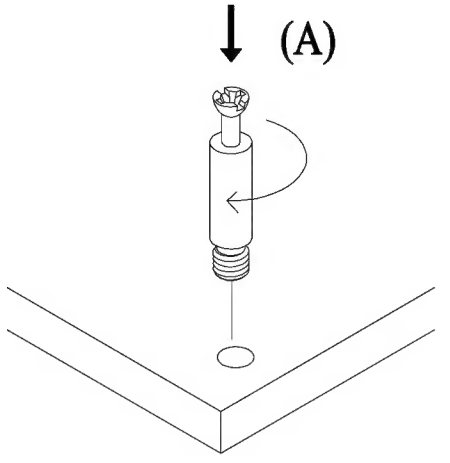
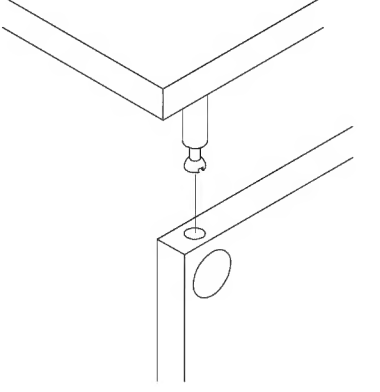
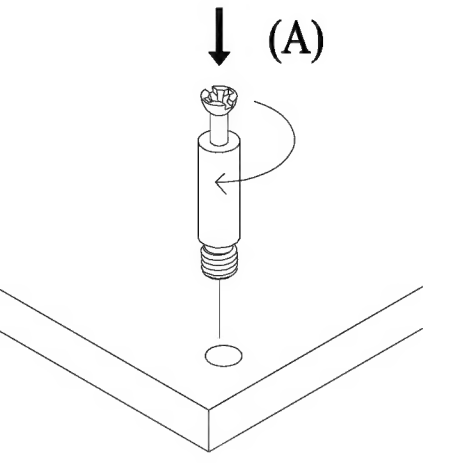
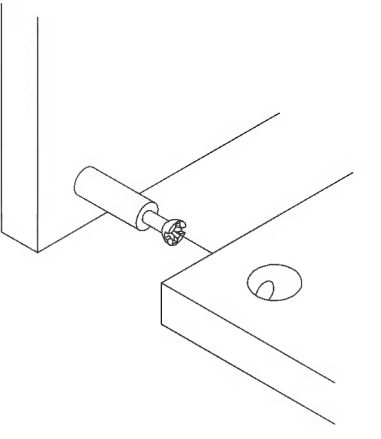
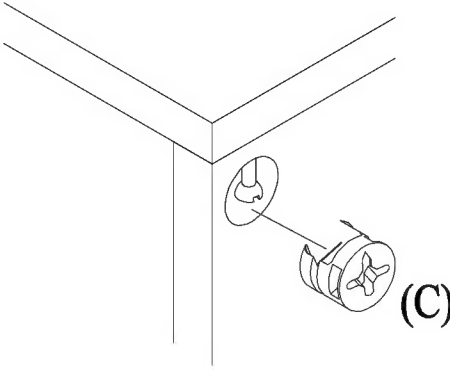
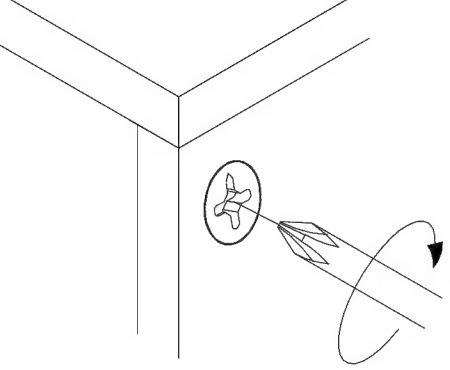
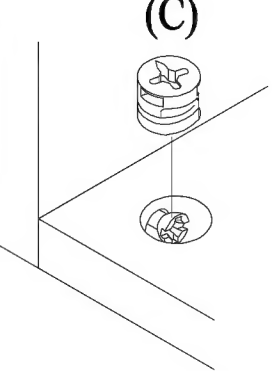
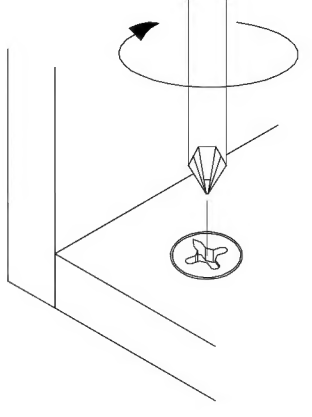
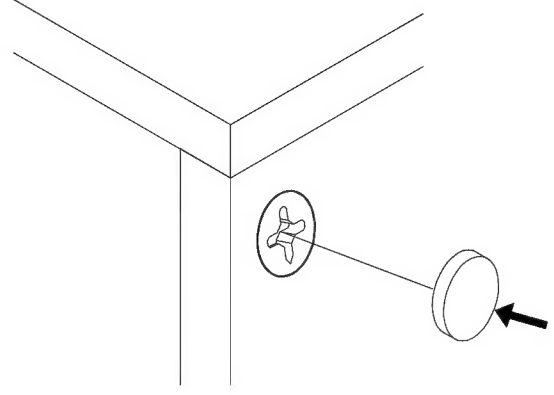
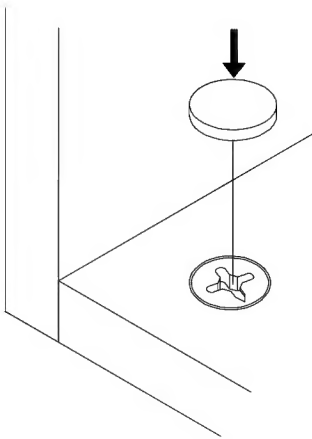
TOOL NEEDED: "+" SCREW DRIVER

STEP 1: SCREW CAM BOLT (A) ONTO PRE-SET PLASTIC NUT ON PANEL. USE A "+" SCREW-DRIVER FOR TIGHTENING. ATTENTION: DO NOT OVER TIGHTEN THE CAM BOLT (A).






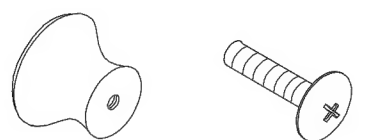
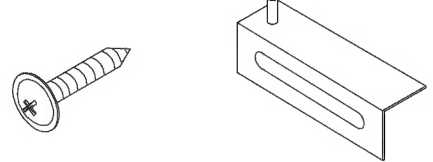
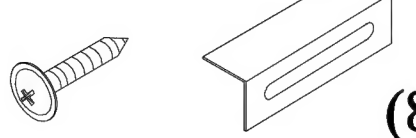
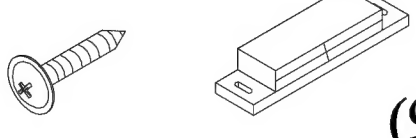
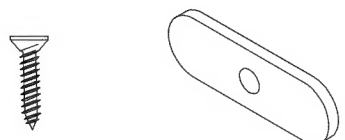
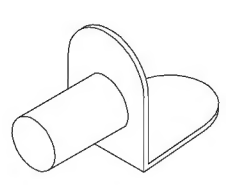



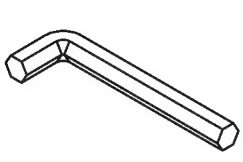
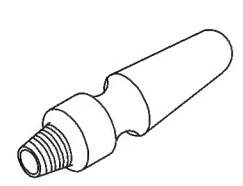
STEP 2: ATTACH BOTH PANELS, MAKE SURE YOU HAVE INSERTED THE CAM BOLT TO THE VERY DEPTH OF THE HOLE WITH RUBBER Mallet GENTLY, CAUTION: DO NOT USE HAMMER. THEN INSERT CAM-LOCK (C) INTO PRE-DRILLED HOLE ON PANEL, MAKE SURE THE ARROW ON CAM-LOCK (C) SET IN PANEL POINT TOWARD THE HOLE INTO WHICH THE CAM BOLT (A) HAS BEEN INSERTED AND INSERTED THE CAM-LOCK (C) TO THE VERY DEPTH OF THE HOLE.

STEP 3: ROTATE THE CAM-LOCK (C) CLOCKWISE TO SECURE CAM BOLT (A) BY TIGHTENING WITH A "+" SCREWDRIVER.
























DETAIL STEP PLEASE SEE THE BELOW PICTURE.

VERTICAL CONNECTION		HORIZONTAL CONNECTION	
(1) 	(2) 	(1) 	(2) 
(3) 	(4) 	(3) 	(4) 
(5) 			(5) 

# HARDWARE LIST

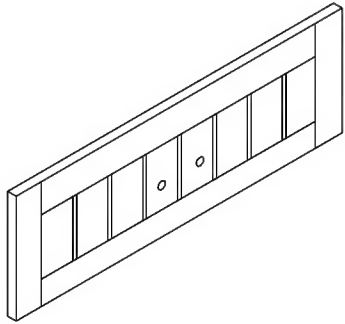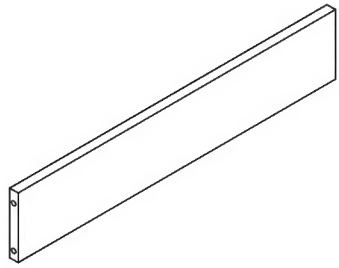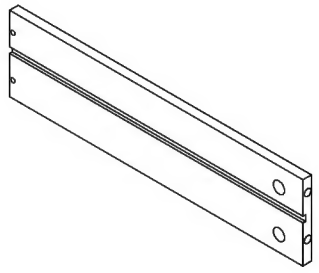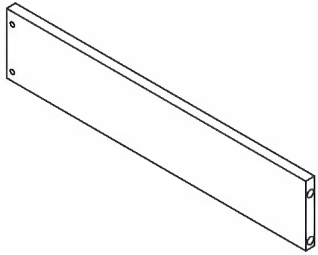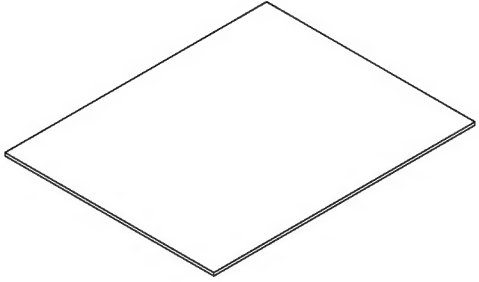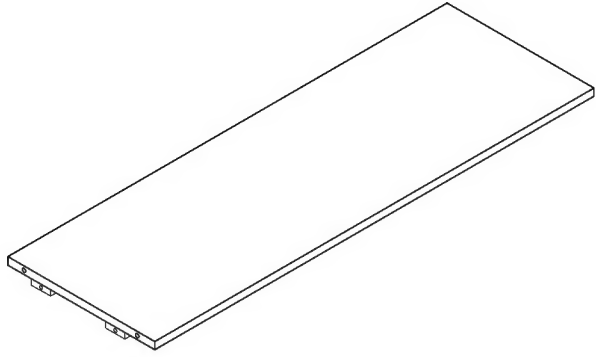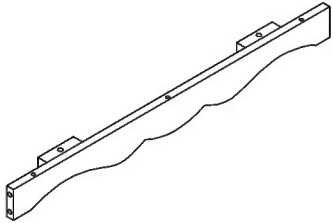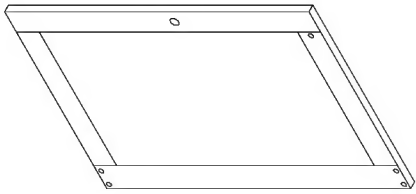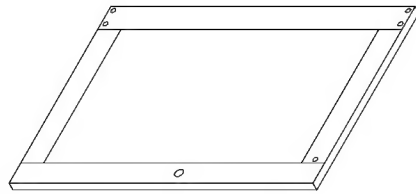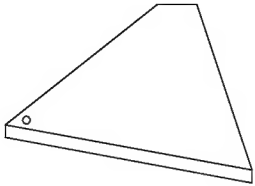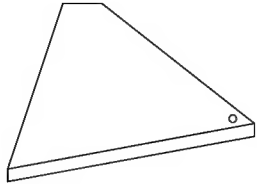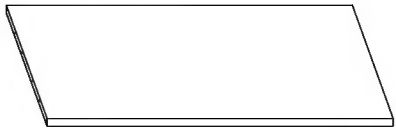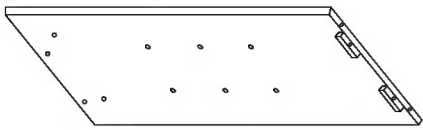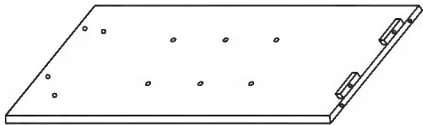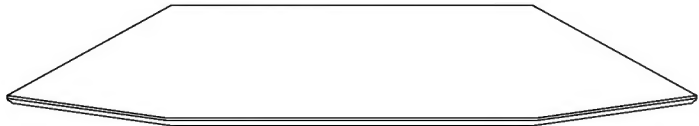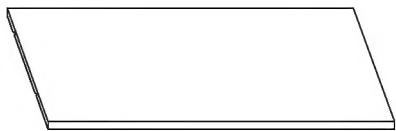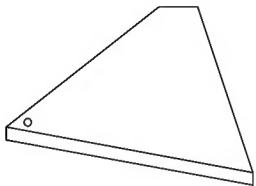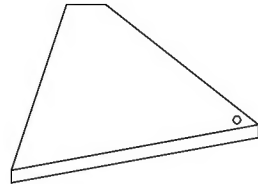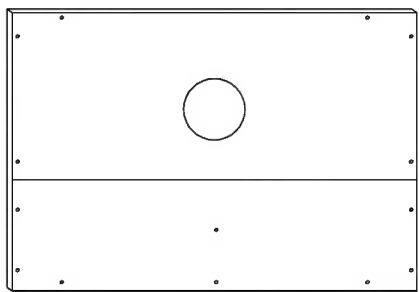
WOOD DOWEL 39 PCS  (1)	CAM BOLT CAM-LOCK 12 SETS  (2)	ROUND HEAD BOLT FLAT WASHER 22 SETS  (3)	KNOB ROUND HEAD BOLT 2 SETS  (4)	DRAWER LIMIT STOPPER ROUND HEAD SCREW 1 SET  (5)
KNOB ROUND HEAD BOLT 2 SETS  (6)	HINGE ROUND HEAD SCREW 2 SETS  (7)	HINGE ROUND HEAD SCREW 2 SETS  (8)	MAGNET LOCK ROUND HEAD SCREW 2 SETS  (9)	IRON SLICE FLAT HEAD SCREW 2 SETS  (10)
SHELF HOLDER 12 PCS  (11)	ROUND HEAD SCREW 27 PCS  (12)	FLAT HEAD SCREW 4 PCS  (13)	VELVET HOLE COVER 4 PCS  (14)	ALLEN KEY 1 PC  (15)
GLUE 1 PC  (16)				

# PARTS LIST

<p><b>DRAWER FRONT PANEL</b> 1 PC</p>  <p>A</p>	<p><b>DRAWER BACK PANEL</b> 1 PC</p>  <p>B</p>	<p><b>DRAWER LEFT SIDE PANEL</b> 1 PC</p>  <p>C</p>
<p><b>DRAWER RIGHT SIDE PANEL</b> 1 PC</p>  <p>D</p>	<p><b>DRAWER BOTTOM PANEL</b> 1 PC</p>  <p>E</p>	<p><b>BOTTOM PANEL</b> 1 PC</p>  <p>F</p>
<p><b>ACROSS PANEL</b> 1 PC</p>  <p>G</p>	<p><b>LEFT DOOR</b> 1 PC</p>  <p>H</p>	<p><b>RIGHT DOOR</b> 1 PC</p>  <p>I</p>
<p><b>BOTTOM PANEL</b> 1 PC</p>  <p>J</p>	<p><b>BOTTOM PANEL</b> 1 PC</p>  <p>K</p>	<p><b>ACROSS PANEL</b> 1 PC</p>  <p>L</p>
<p><b>SHELF</b> 1 PC</p>  <p>M</p>	<p><b>LEFT MIDDLE PANEL</b> 1 PC</p>  <p>N</p>	<p><b>RIGHT MIDDLE PANEL</b> 1 PC</p>  <p>O</p>
<p><b>LEFT SIDE PANEL</b> 1 PC</p>  <p>P</p>	<p><b>RIGHT SIDE PANEL</b> 1 PC</p>  <p>Q</p>	<p><b>TOP PANEL</b> 1 PC</p>  <p>R</p>
<p><b>SHELF</b> 1 PC</p>  <p>S</p>	<p><b>SHELF</b> 1 PC</p>  <p>T</p>	<p><b>SHELF</b> 1 PC</p>  <p>U</p>
<p><b>BACK PANEL</b> 1 PC</p>  <p>V</p>	<p><b>ACROSS PANEL</b> 1 PC</p>  <p>W</p>	


### STEP 1: ASSEMBLE DRAWER

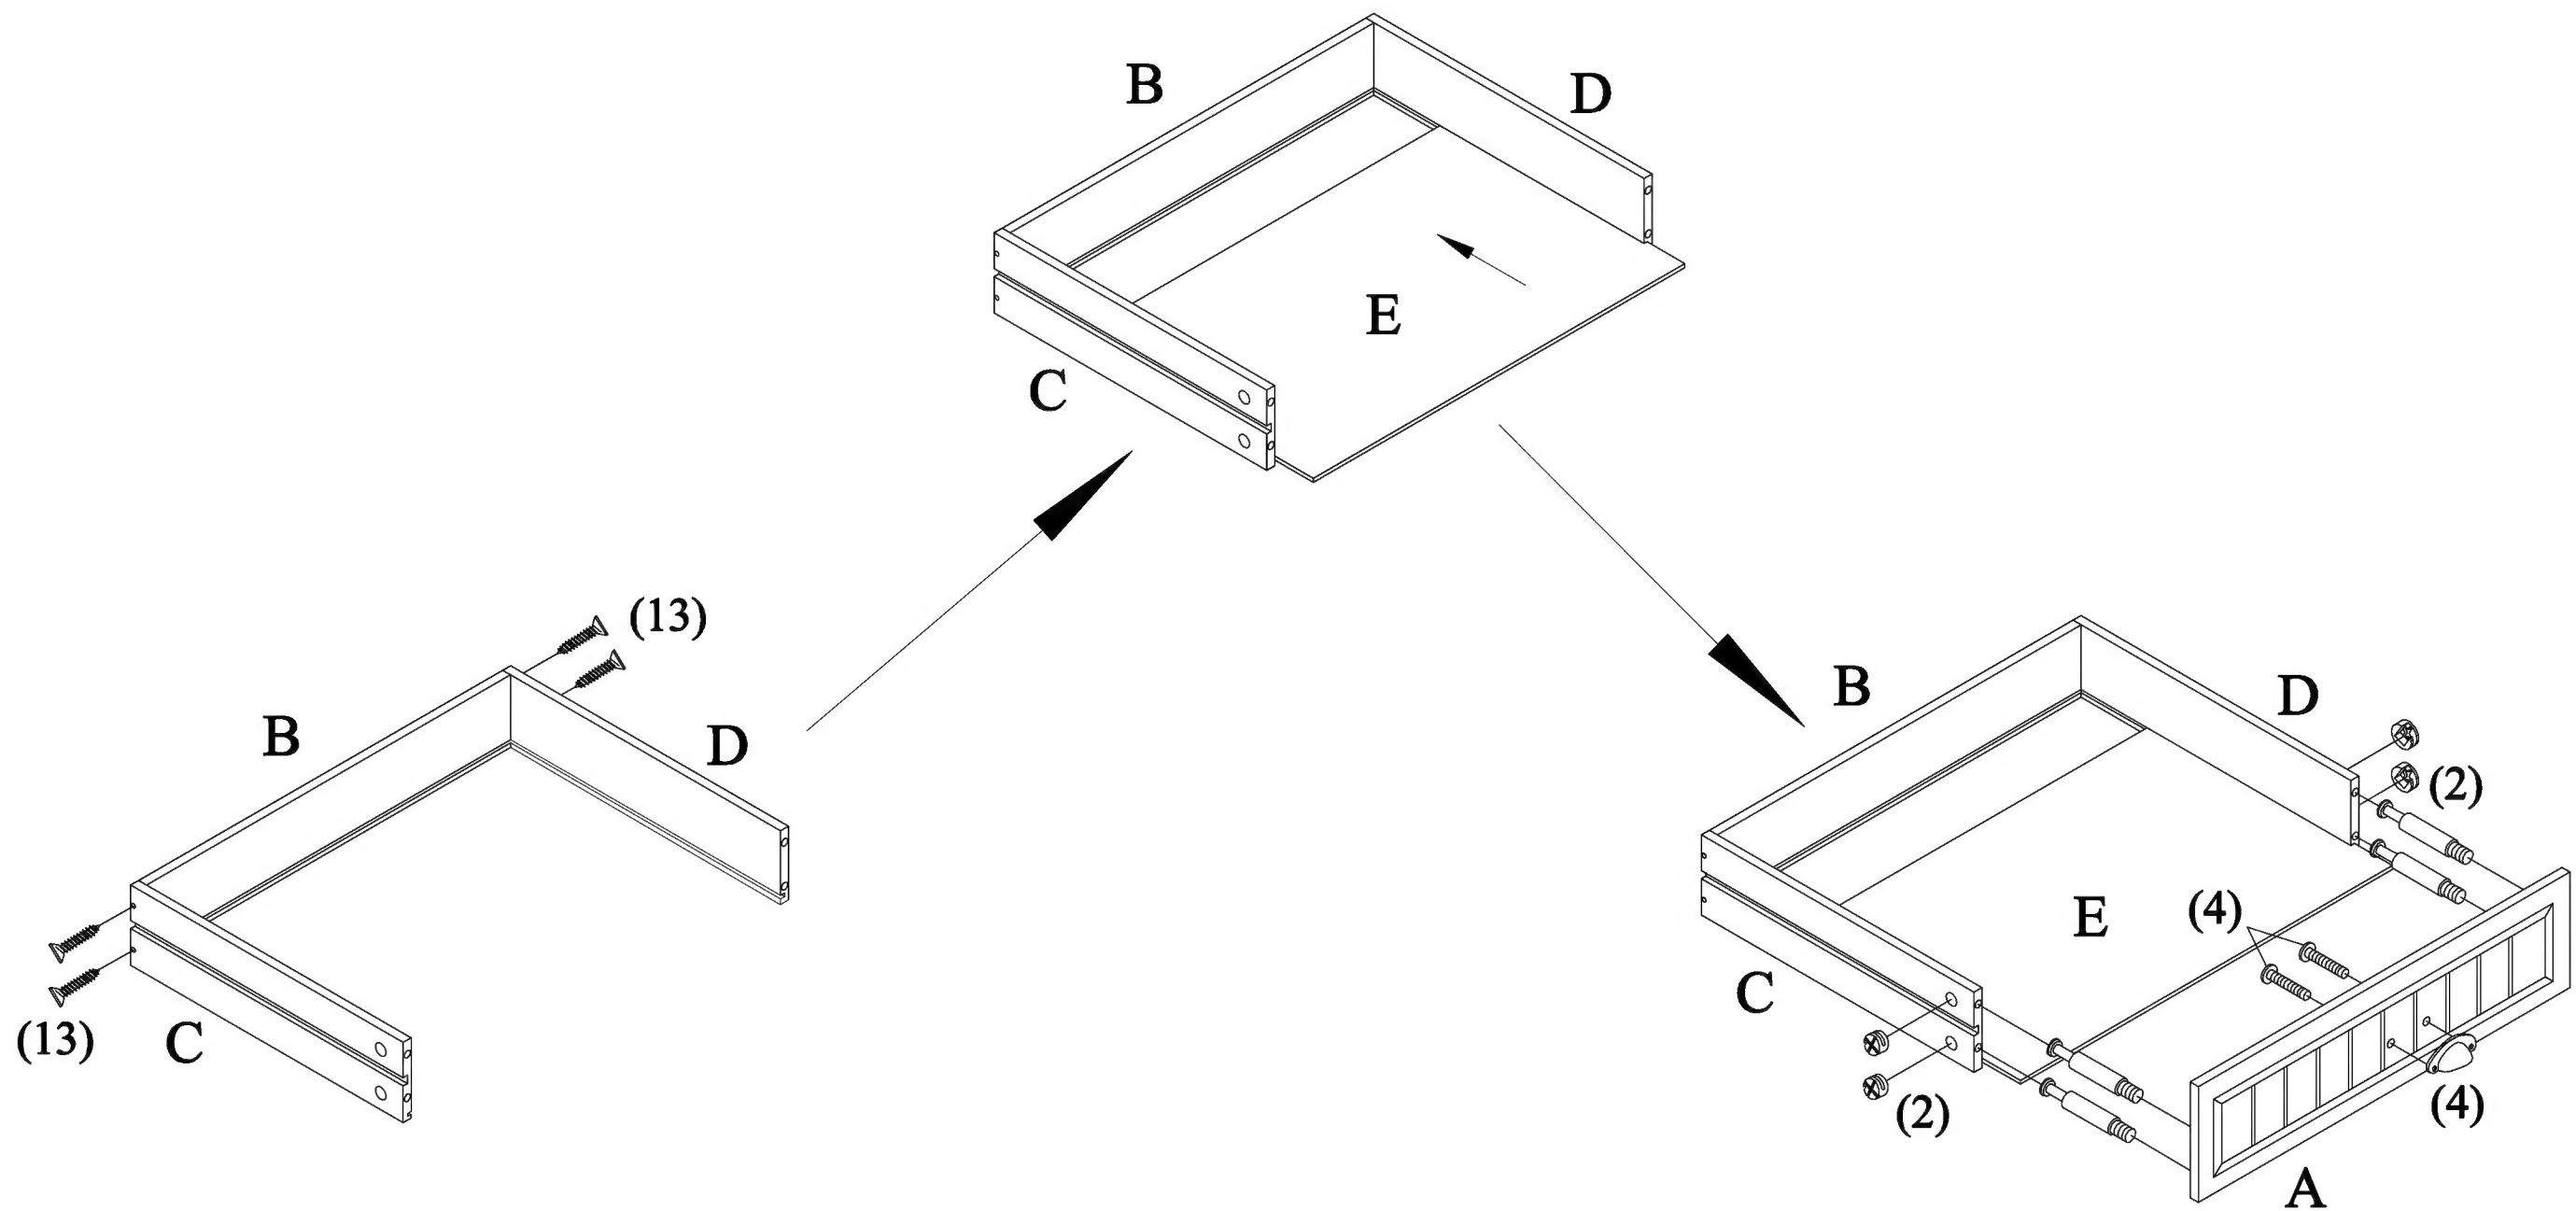- USE SCREW (13) TO ATTACH DRAWER SIDE PANEL (C & D) AND DRAWER BACK PANEL (B) TOGETHER.
- INSERT THE DRAWER BOTTOM PANEL (E) INTO SLOTS IN SIDE PANEL (C & D).
- USE CAM-BLOT & CAM-LOCK (2) TO FIX DRAWER SIDE PANEL (C & D) AND DRAWER FRONT PANEL (A).
- USE ROUND BOLT (4) TO ATTACH HANDLE (4) ONTO DRAWER DRAWER FRONT PANEL (A).



### STEP 2: ASSEMBLE ACROSS PANEL (G) ON BOTTOM PANEL (F)

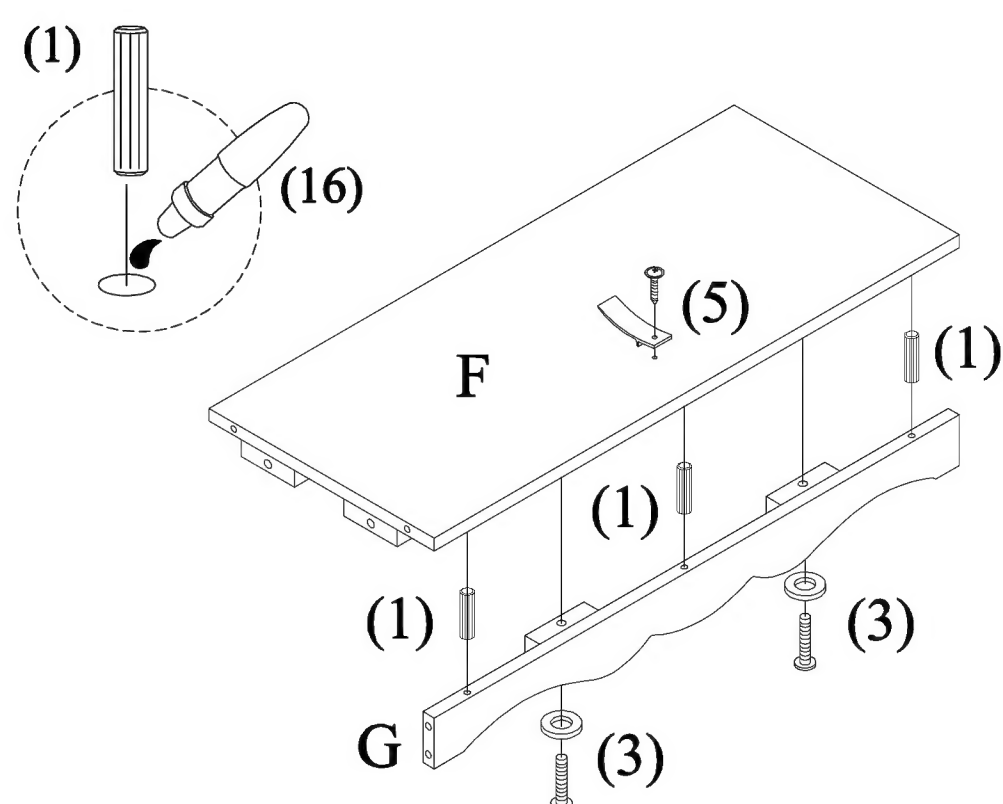
- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES. (DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ATTACH ACROSS PANEL (G) AND BOTTOM PANEL (F) TOGETHER BY ALLEN KEY (15).
- USE ROUND HEAD SCREW (5) TO ATTACH DRAWER LIMIT STOPPER (5) ONTO BOTTOM PANEL (F).






**STEP 3: ASSEMBLE ACROSS PANEL (L & W) ON BOTTOM PANEL (J & K )**

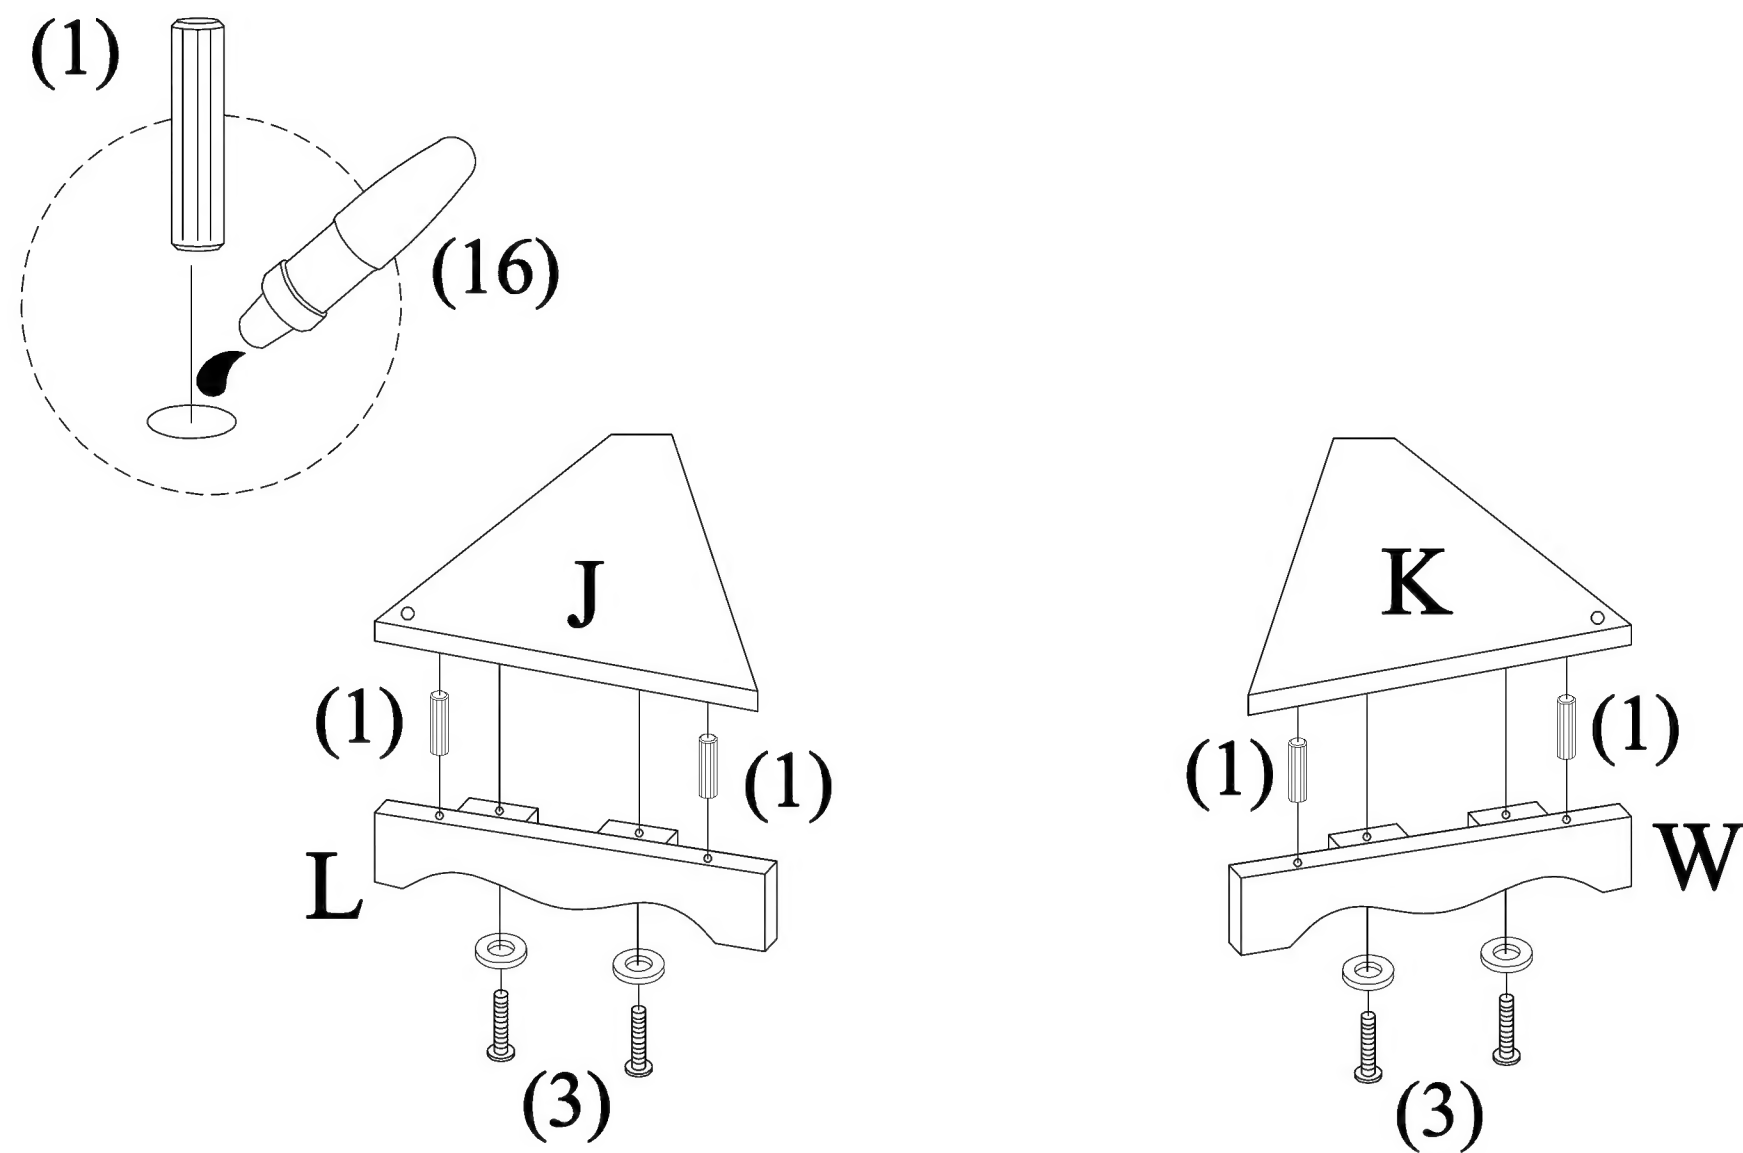- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.  
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ATTACH ACROSS PANEL (L & W) AND BOTTOM PANEL (J & K) TOGETHER.




**STEP 4: ASSEMBLE KNOB (6), HINGE (7)&( 8), IRON SLICE (10)**

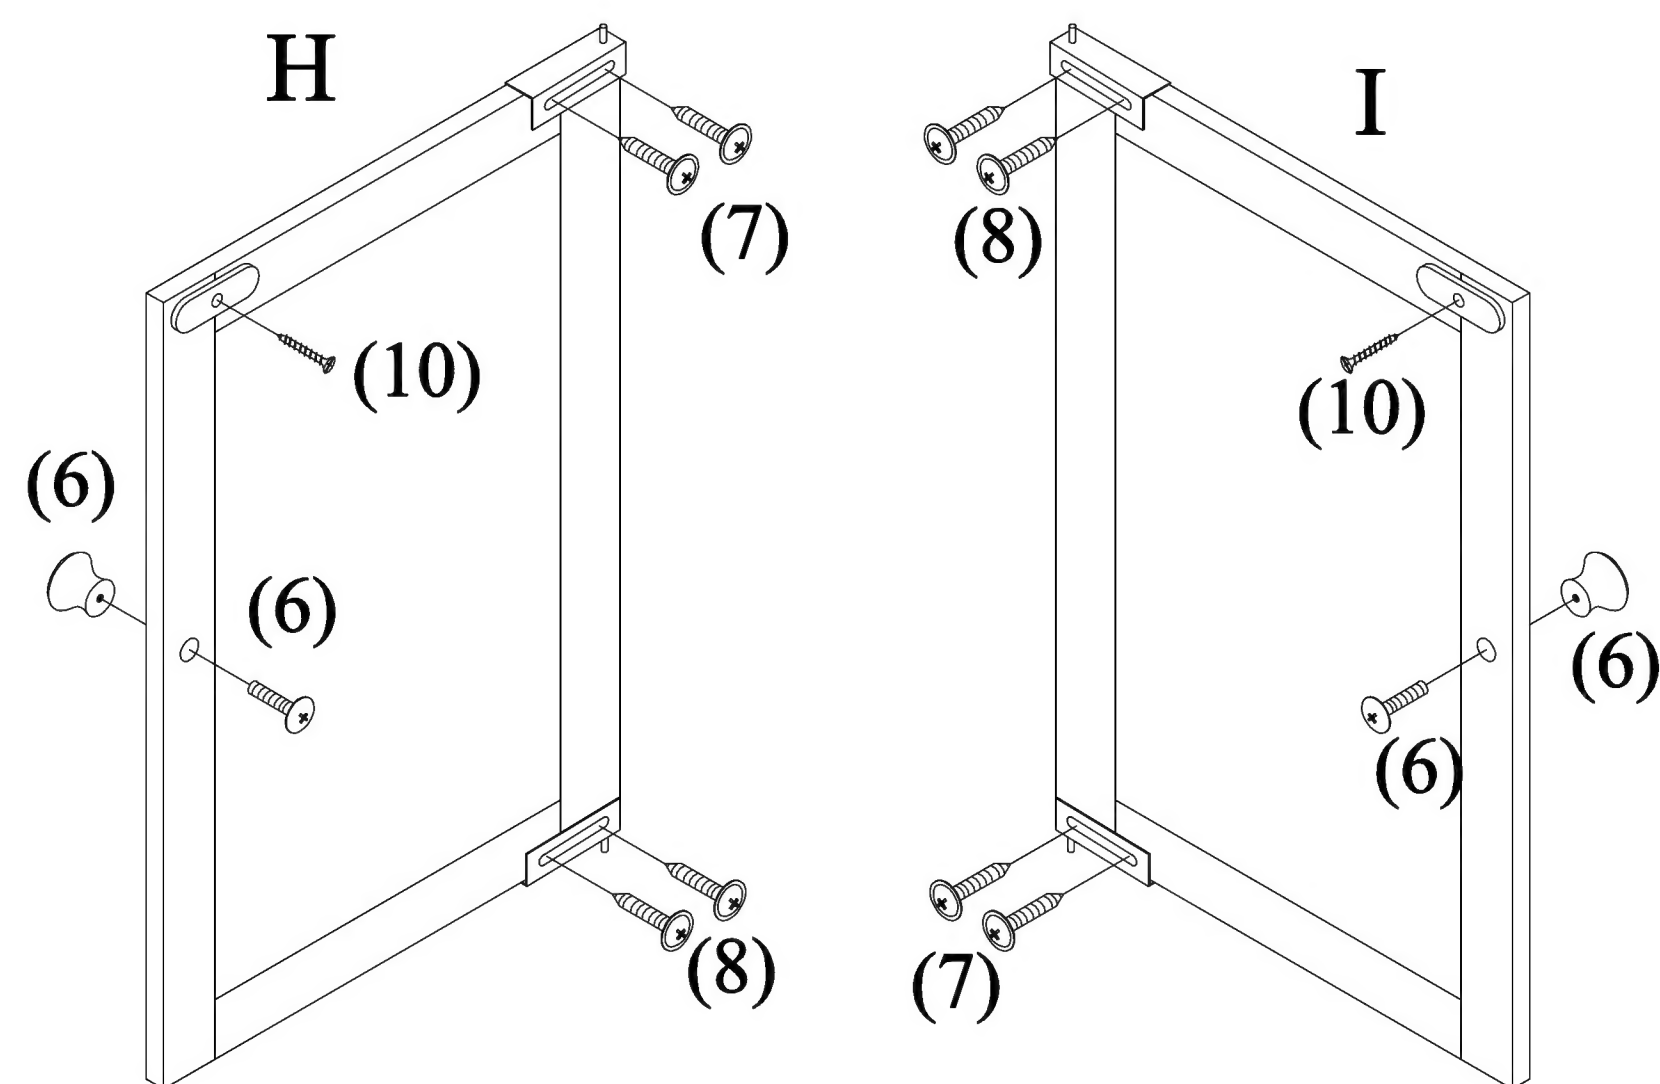- USE ROUND HEAD BOLT (6) TO ATTACH KNOB (6) ONTO DOOR (H & I).
- USE ROUND HEAD SCREW (7) & (8) TO ATTACH HINGE (7) & (8) ONTO DOOR (H & I) TOGETHER.
- USE FLAT HEAD SCREW (10) TO ATTACH IRON SLICE (10) ONTO DOOR (H & I).




**STEP 5: ASSEMBLE MIDDLE PANEL (N & O) AND SHELF (M)**

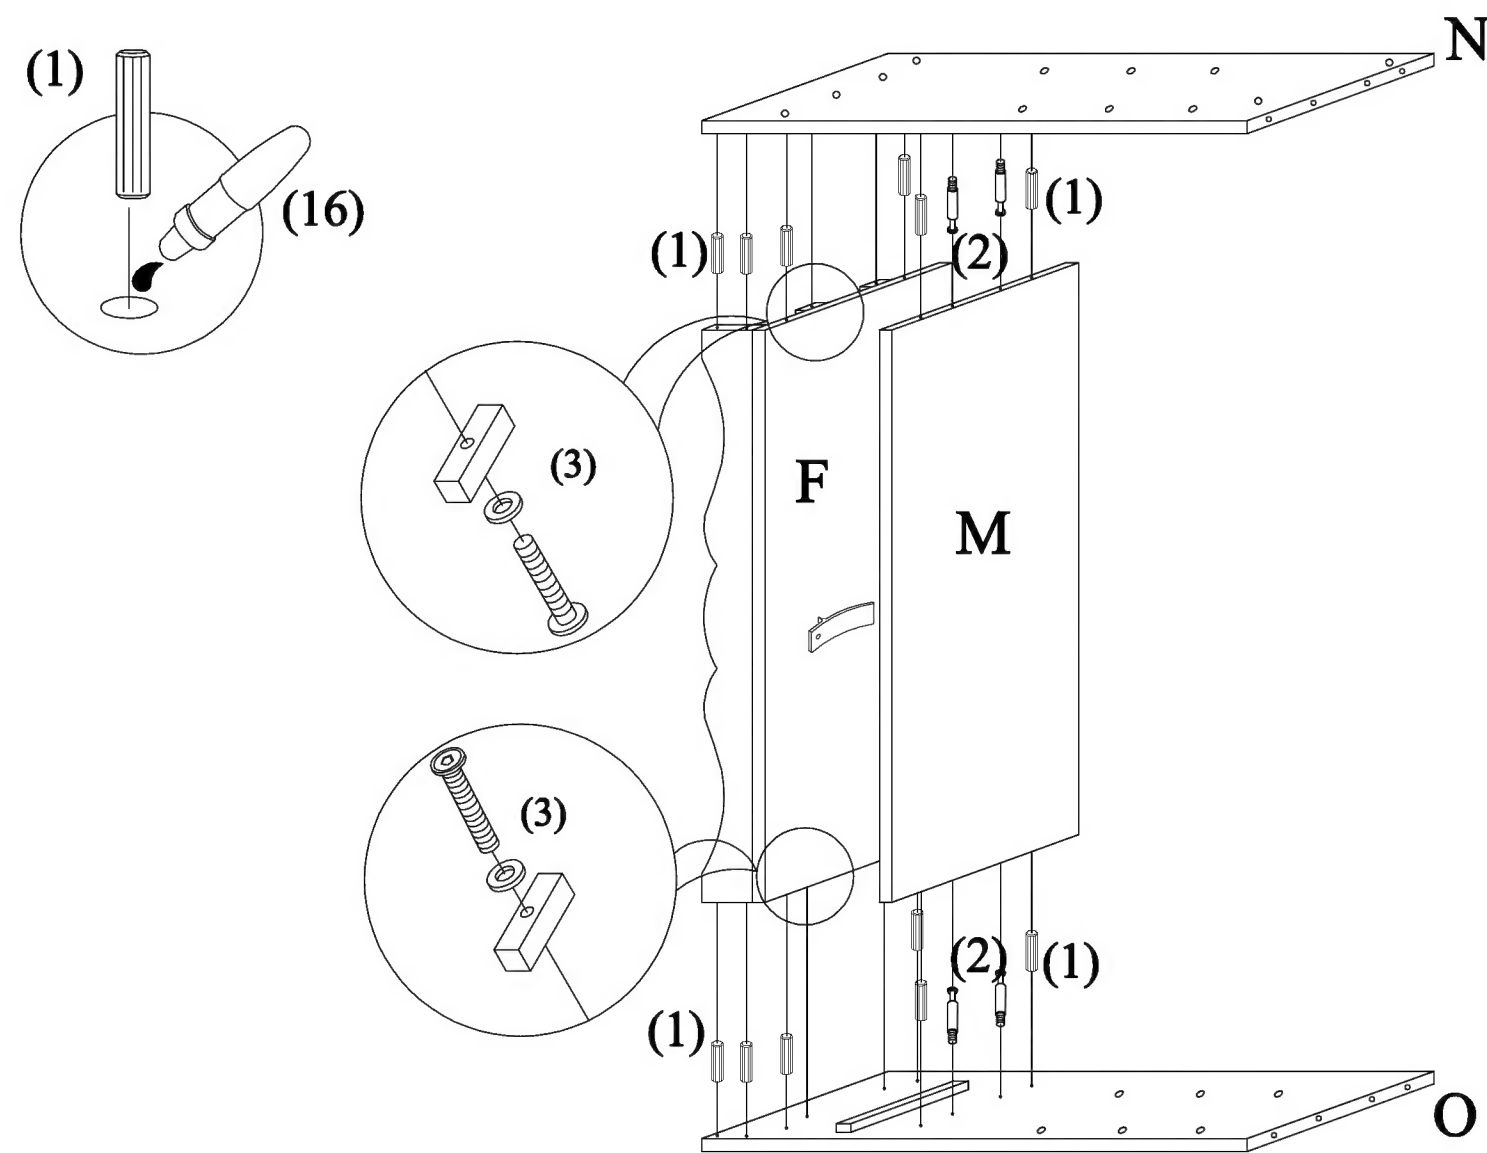- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.  
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) AND CAM BOLT & CAM-LOCK (2) TO ASSEMBLE MIDDLE PANEL (N & O), SHELF (M), AND BOTTOM PANEL (F) TOGETHER.




**STEP 6: ASSEMBLE SIDE PANEL (P & Q)**

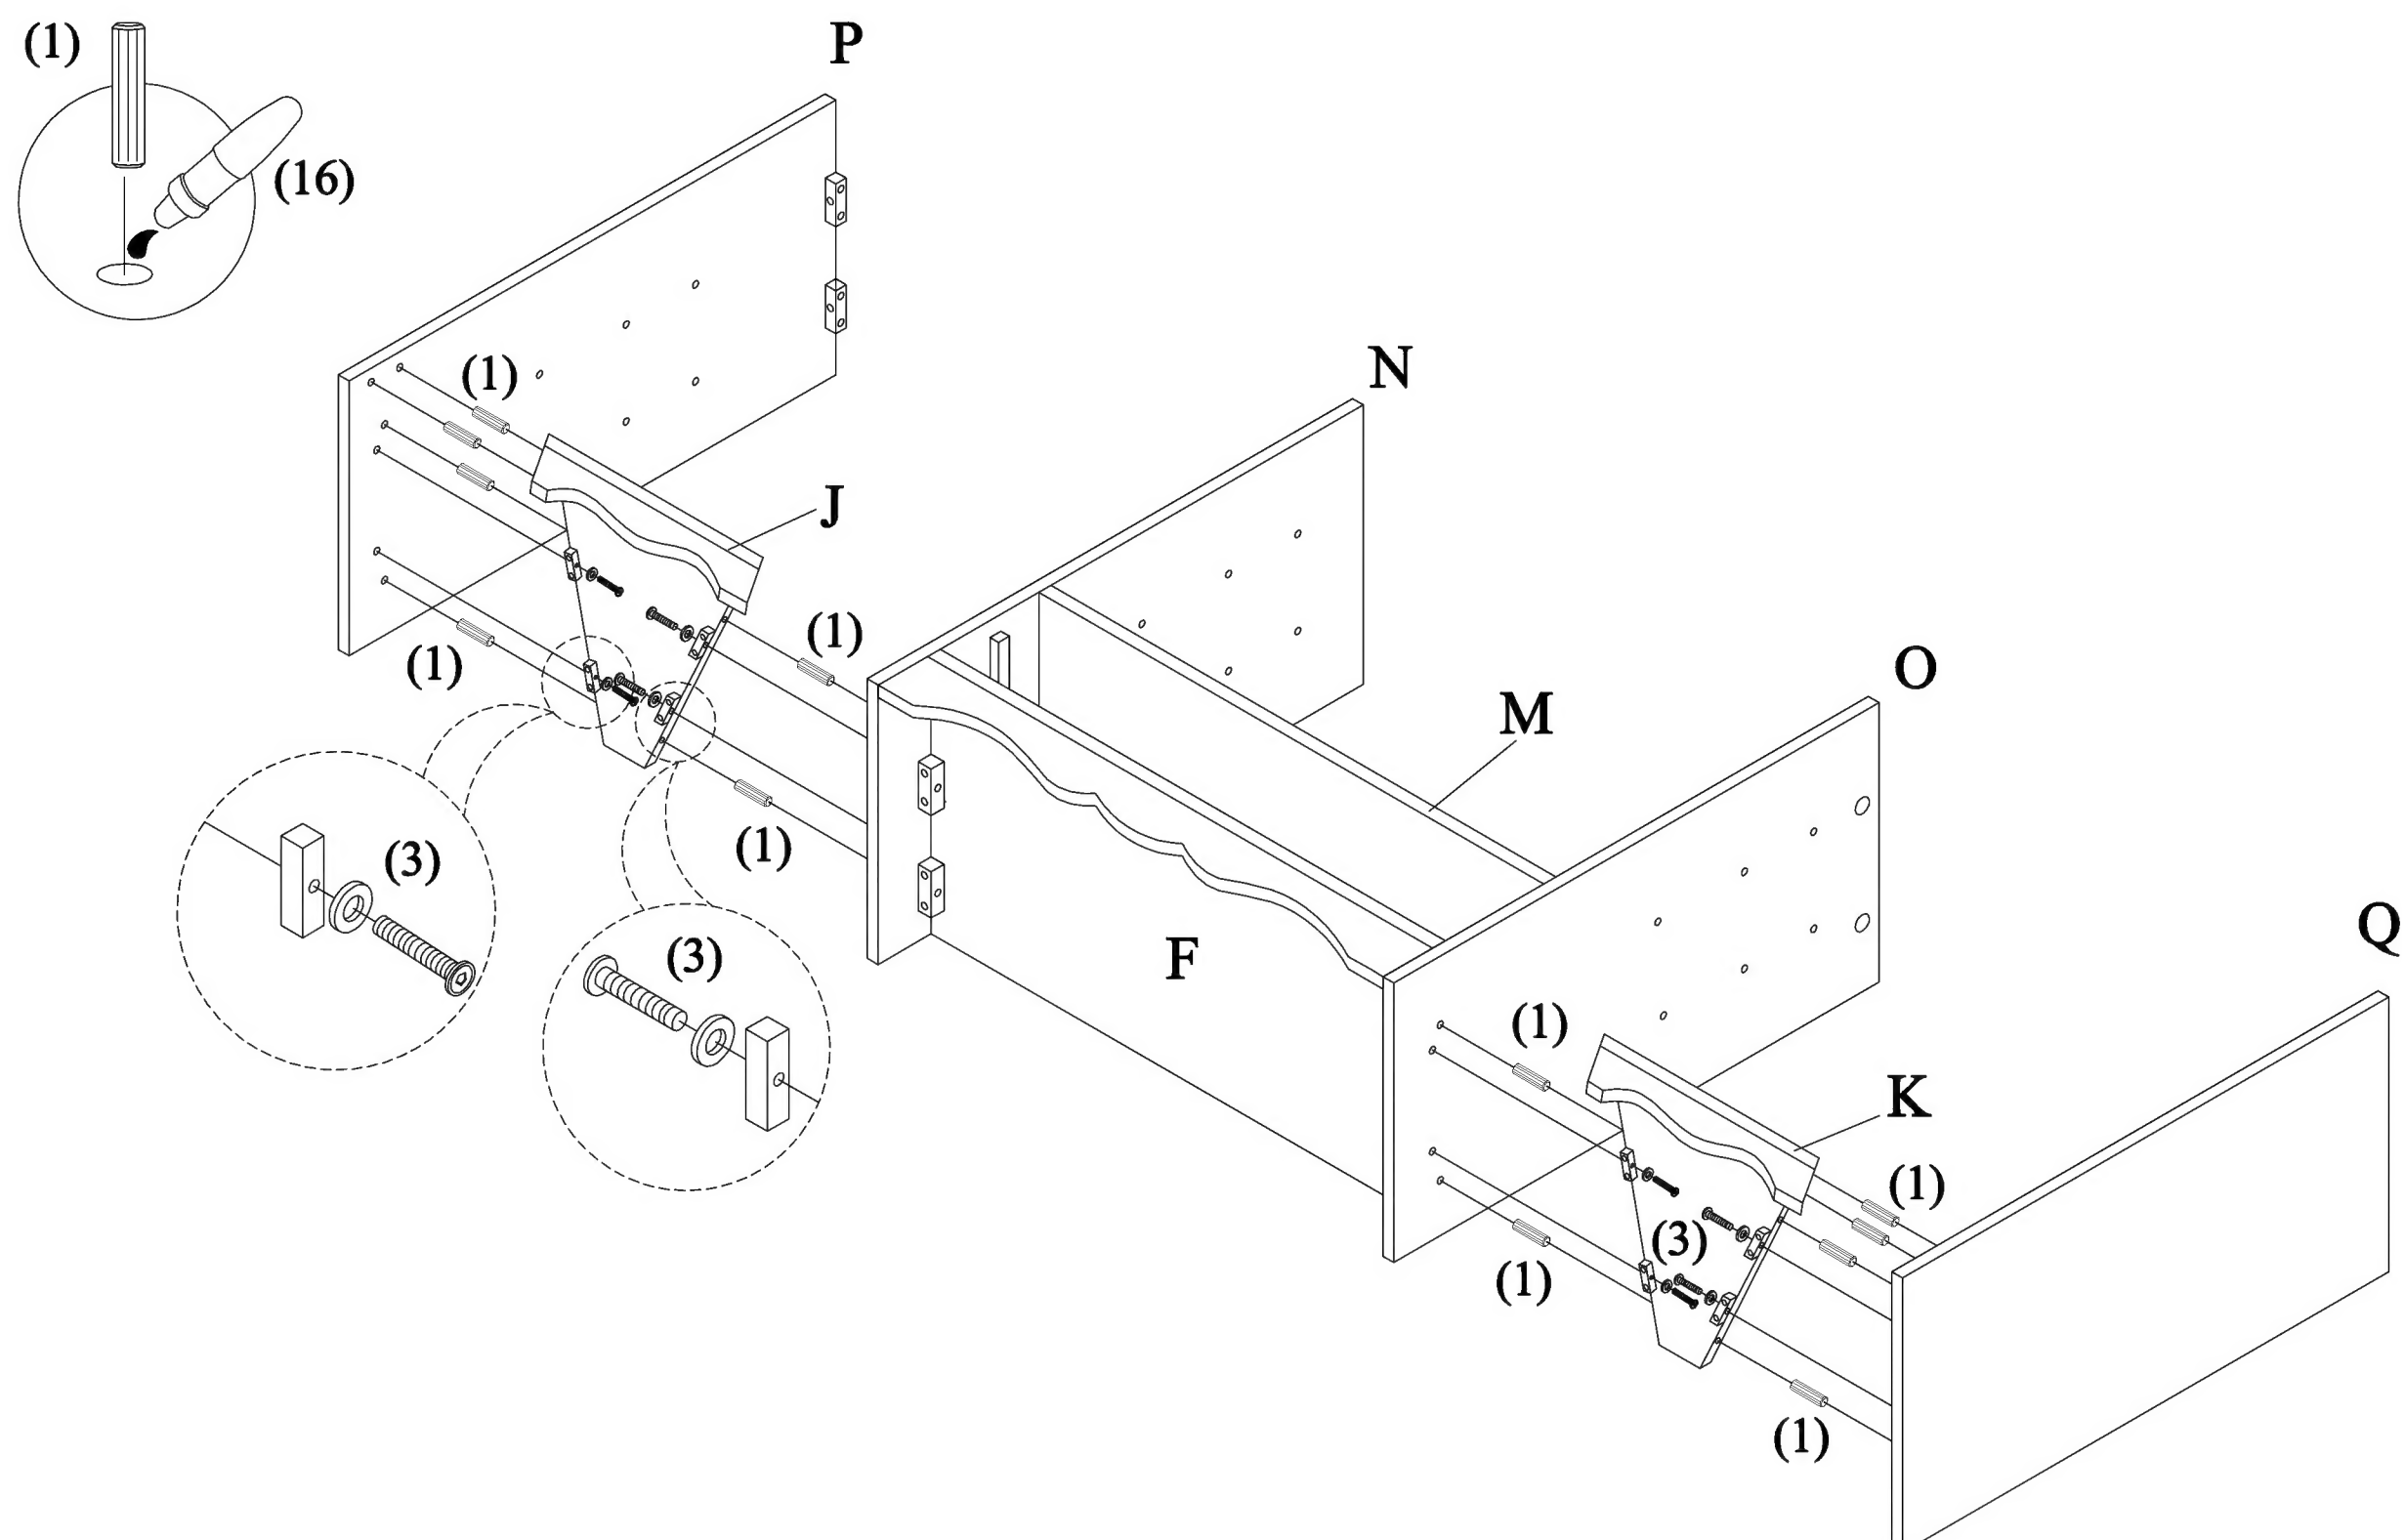- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.  
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE ROUND HEAD BOLT & FLAT WASHER (3) TO ASSEMBLE SIDE PANEL (P & Q), BOTTOM PANEL (J & K), MIDDLE PANEL (N & O) TOGETHER AS SHOWN.




### STEP 7: ASSEMBLE TOP PANEL (R) AND DOOR (H & I)

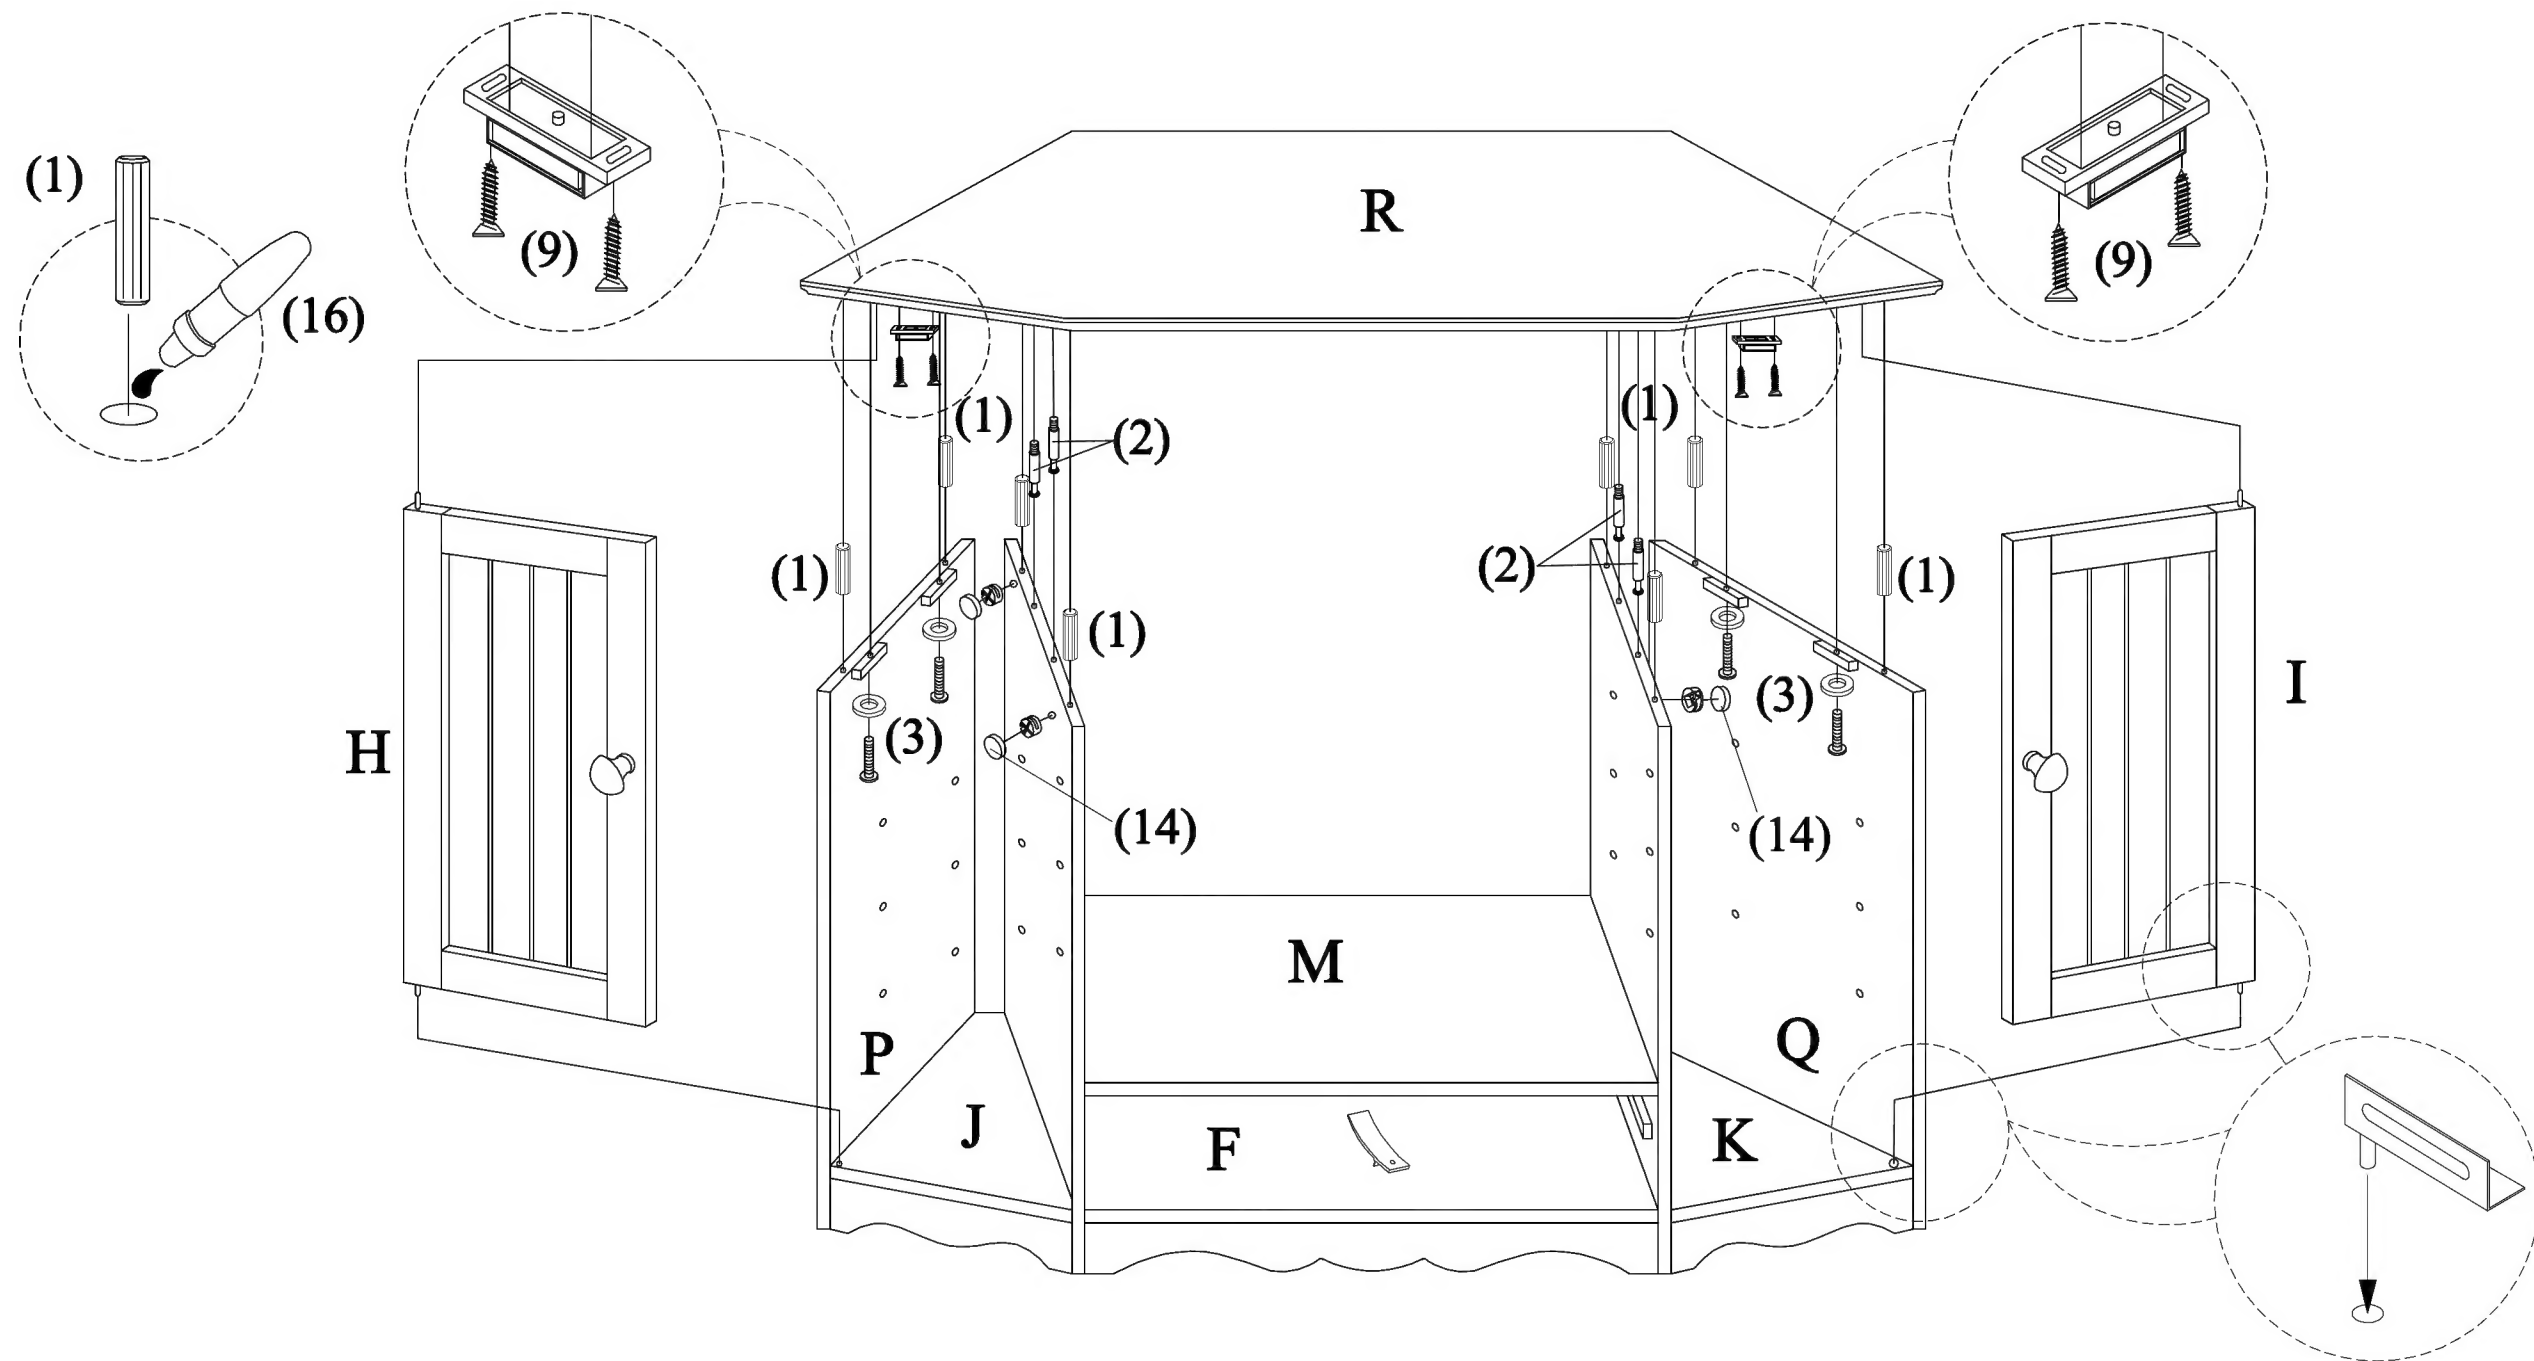- FILL RELEVANT HOLES 1/4 FULL OF GLUE, INSERT WOOD DOWEL (1) INTO THESE HOLES.  
(DETAILS SEE WOODEN DOWEL INSTALLATION PROCEDURE ON PAGE 2).
- USE CAM BOLT & CAM LOCK (2) AND ROUND HEAD BOLT & FLAT WASHER (3) TO ASSEMBLE MIDDLE PANEL (N & O), SIDE PANEL (P & Q), TOP PANEL (R) AND DOOR (H & I) TOGETHER.
- USE ROUND HEAD SCREW (9) TO ATTACH MAGNET LOCK (9) ONTO TOP PANEL (R), INSERT THE HINGE OF DOOR (H & I) INTO THE RELEVANT HOLES ON THE TOP PANEL (R) AND BOTTOM PANEL (J & K) AS SHOWN.
- USE THE VELVET HOLE COVER (14) TO COVER THE CAM-LOCK HOLES.



### STEP 8: ASSEMBLE SHELF (S, T, U) AND PLACE DRAWER

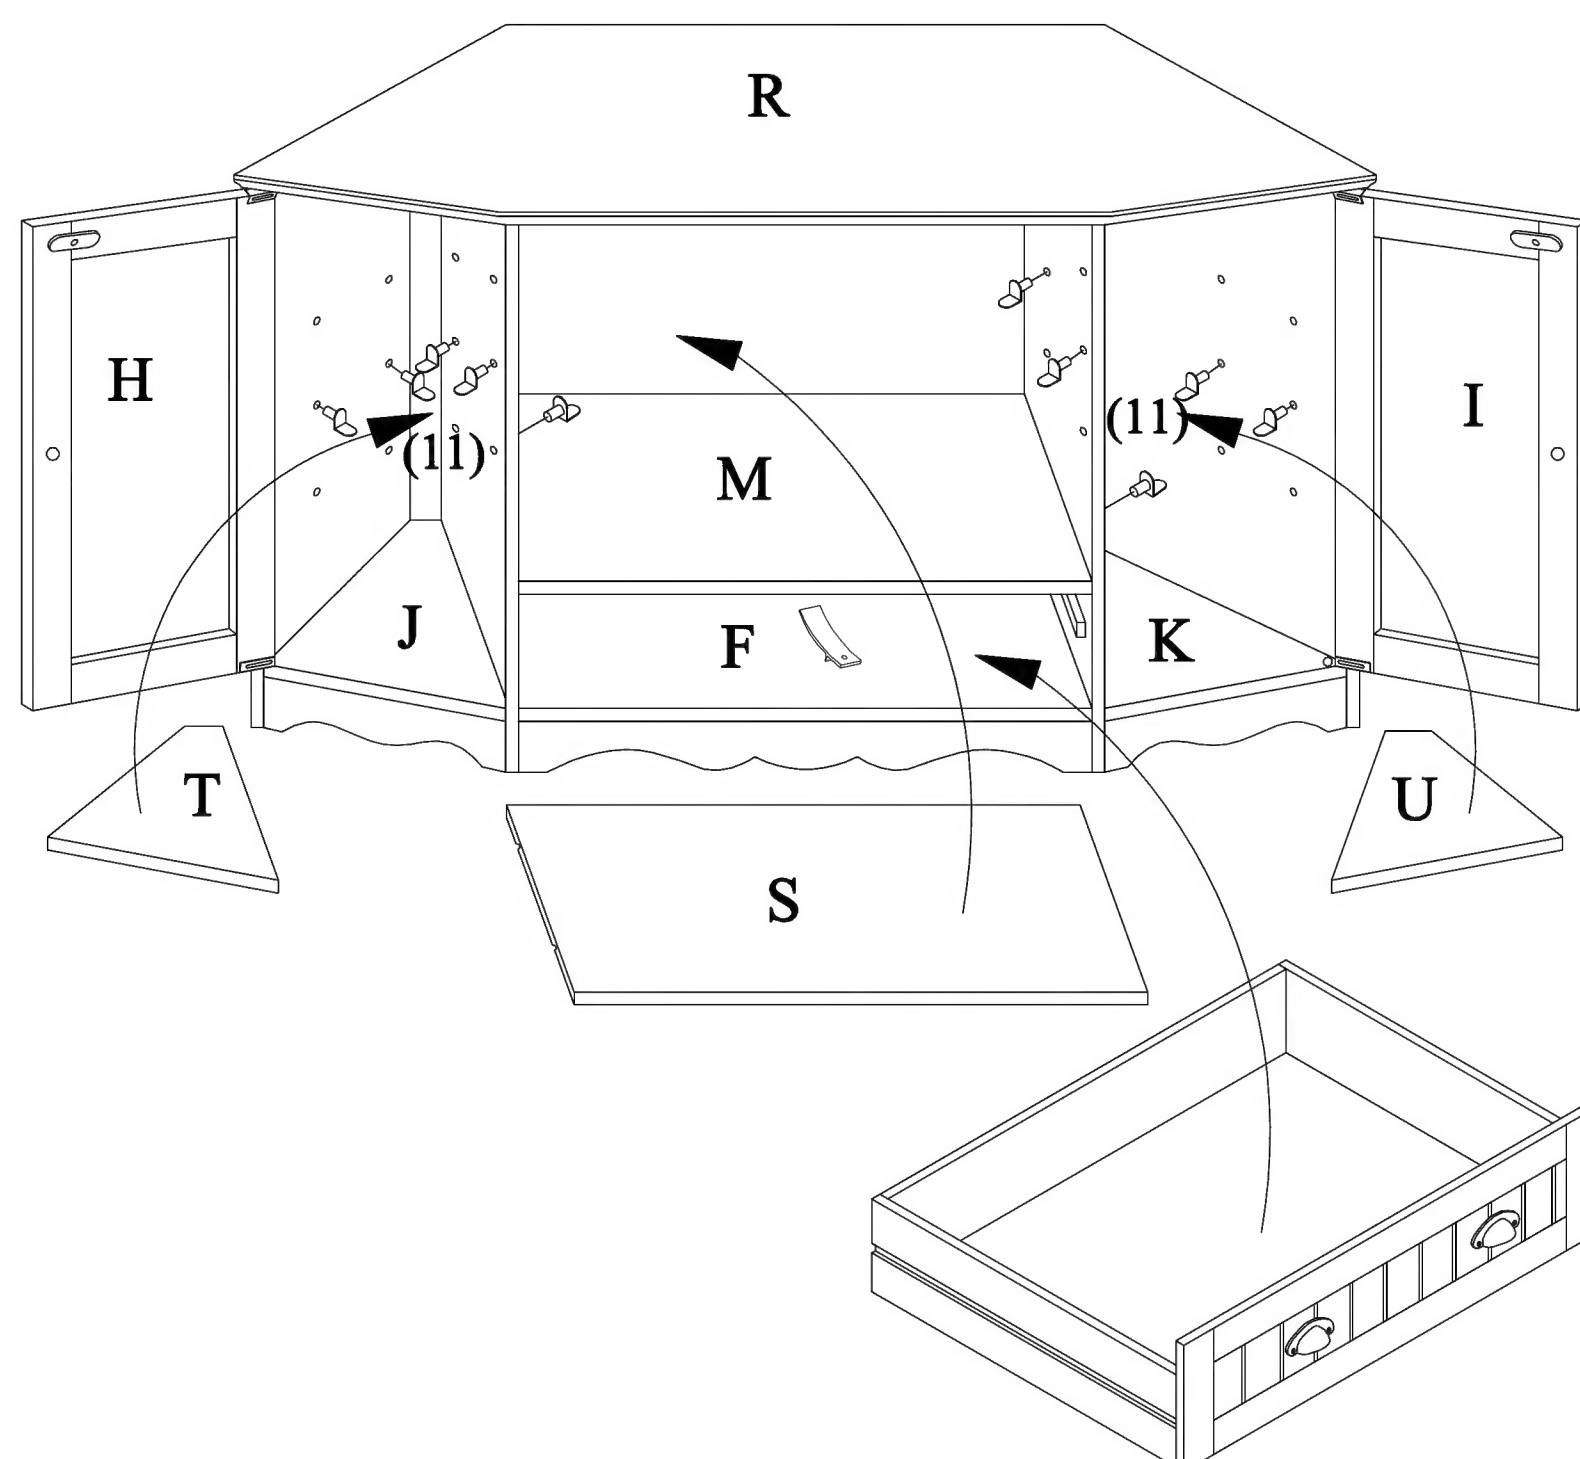- INSERT SHELF HOLDERS (11) INTO THE HORIZONTAL HOLES INSIDE OF SIDE PANEL (P & Q) AND MIDDLE PANEL (N & O), THEN PLACE SHELF BOARD (S, T, U) INSIDE OF THE DOOR (H & I).
- INSERT THE DRAWER UNDER SHELF (M) AS SHOWN.





STEP 9: ASSEMBLE BACK PANEL (V)

- USE ROUND HEAD SCREW (12) TO ATTACH BACK PANEL (V) ON THE BACK OF PRE-ASSEMBLED UNIT.

NOTE:BEFORE YOU ASSEMBLE BACK PANEL, PLEASE MAKE SURE THE 2 SIDE PANELS HAVE EVEN GAP BETWEEN THEM. IF UNEVEN, SHIFT THE SIDE PANELS EVENLY SPACED, THEN ATTACH BACK PANEL.

